DENVER®

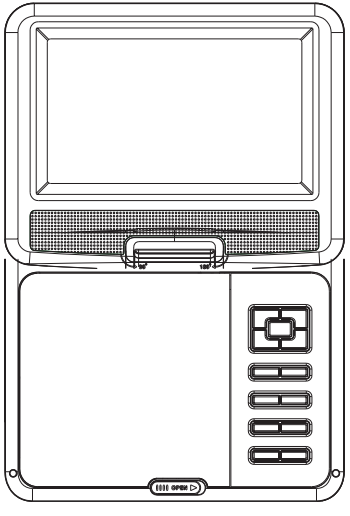

USER'S MANUAL
MT-773

PORTABLE DVD

DOLBY DIGITAL

DVD VIDEO

COMPACT disc DIGITAL AUDIO

Kodak Picture CD COMPATIBLE

Before connecting, operating or adjusting this product, please read this user's manual carefully and completely.

Table of Contents

Contents

Table of Contents P1

Safety Precautions P2

Identification of Controls P3-P4

Main Unit P3

Remote control unit P4

SETUP Menu Setting P5-P7

General Setup Page P5

Audio Setup Page P5

Video Setup Page P6

Preference Page P6

Password Setup Page P7

Parameters and specifications P8

Safety Precautions

WARNING
RISK OF ELECTRIC SHOCK DO NOT OPEN

Warning:To reduce the risk of electric shock,do not remove the cover or back of this product.There are no user-serviceable parts inside. Refer servicing to qualified service personnel.

Warning: To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water,rain, or moisture. Do not place objects filled with water such as vases, on the Product.

Warning: This digital video disc player employs a laser system. Use of controls,adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation Exposure.

Warning: To prevent direct exposure to laser beam,do not open the enclosure.Visible laser radiation when open.

Warning: Never stare directly into the laser beam.

Caution: Do not install this product in a confined space such as a book case or similar unit.

Warning: when the unit using by child, parents must make sure to let the child understand all contents in Instruction book how battery using to guarantee using battery correctly all the time.

Warning: when find battery overheat, swell or dour, please stop using battery and contact service centre for getting replacement.

Warning: do not charging battery on the place of insufficient ventilation such as: mattress, sofa, cushion , soft mat.....

Warning: we will not take any responsibility if user incorrectly use battery, not following our warning instruction label on the battery case.

More than 250mm USB extension Cord is prohibited to USB for USB port.

Notes on Copyrights:

- It is forbidden by law to copy, broadcast, show,broadcast via cable, play in public, or rent copyrighted material without permission.
- This product features the copy protection function developed by Macrovision.Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear.This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners.Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by macrovision Corporation. Reverse engineering or disassembly is prohibited.
- **SERIAL NUMBER:**
  You can find the serial number on the back of the unit.This number is unique to this unit and not available to others.You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. _____
Serial No. _____
Date of Purchase_____

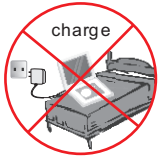

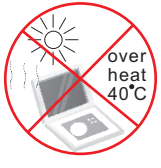

Before using the player, please ensure that the local AC voltage is suitable for this unit.

Identification of Controls

Main Unit

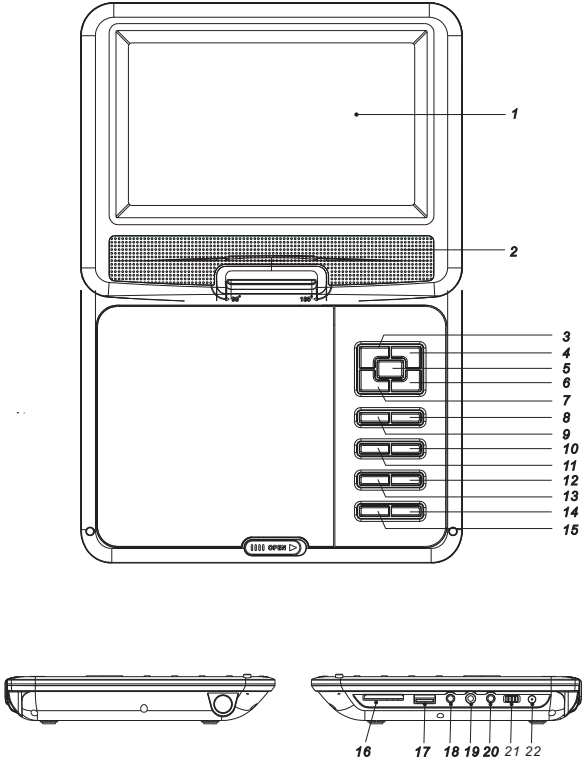

1.TFT screen
2.Speakers
3.PREV/UP
4.FF/RIGHT
5.OK
6.NEXT/DOWD
7.FR/LEFT
8. MODE
9. DVD/SD/USB
Select input source, DVD/card,usb.
10.SETUP
11. MENU
12.VOL+
13.VOL-
14. PLAY/PAUSE
15. STOP
16.SD/MMC/MS
17.USB
18.COAXIAL
19.Headphone out jacks
20.AV OUT
21.Power ON/OFF switch
22.DC IN 9-12V

Insert the battery

1.Open the battery door.

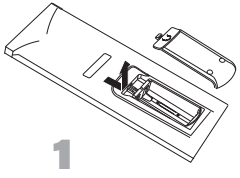

2.Insert two AAA size batteries.

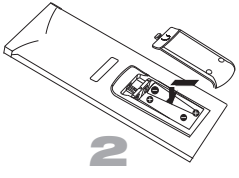

NOTES:
Remove battery during storage or when you are not using the DVD player for a long time.

Identification of Controls

Remote control unit

1. PLAY/PAUSE (⏯)
Starts playback or pause playback.

2. STOP (■)
Stops playback.

3. Reverse Skip (⏮)
Go to previous chapter / track or to the beginning.

4. Forward Skip(⏭)
Go to the next chapter / track.

5.ZOOM
Enlarges video image.

6.REPEAT
Repeat chapter, track, title all.

7.A B
Repeat sequence.

8. PROGRAM
Place a track on the program list.

9.MUTE
Disable Audio output.

10.TITLE
Return to DVD title menu.

11.OSD
Switches the OSD language.

12.0-9 NUMBER BUTTON
Selects numbered items in a menu.

13.ENTER
Confirms menu selection.

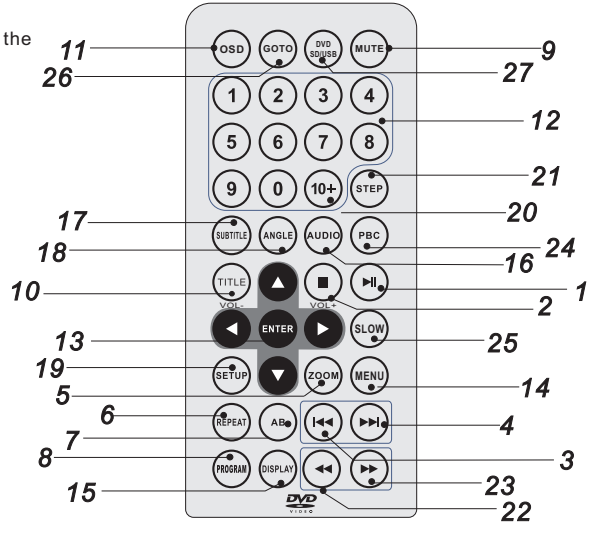

14. MENU
Accesses menu on a DVD disc. (Left/right/up/down)

15.DISPLAY
Accesses On-Screen display.

16.AUDIO
Selects an audio language (DVD).

17.SUBTITLE
Selects a subtitle language.

18.ANGLE
Selects a DVD camera angle if available

19.SETUP
Accesses or removes setup menu.

20.10+ BUTTON
Add 10+ while your selection is more than10.

21.STEP
Step the motion in DVD mode.

22. ◀◀ BUTTON
Fast backward.

23. ▶▶ BUTTON
Fast forward.

24. PBC
PBC on/off switch.

25.SLOW
Slow playback

26.GOTO
Goto time point , title or chapter you want in DVD Mode

27.DVD/SD/USB
DVD/CARD/USB.

Turn off the power and keep AC cord pulled out from the outlet when connecting the systerm.

General Operation&General Setup Page

- ***General Operation***

1.Press SETUP to enter the Setup Menu.
2.Press ENTER to enter the next level submenu or confirm your selection.
3.Press ◄► to enter the submenu or returen to the previous menu
4.Press ▲▼ to highlight the desired menu.

To exit from the menu
Press SETUP → The settings will be stored in the player's memory even if the player is switched off.

- ***General Setup Page***

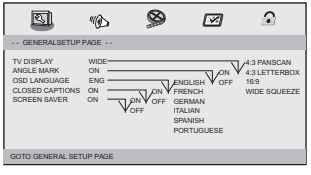

- **TV Display**
Set the aspect ratio of the DVD Player according to the TV you have connected.

Normal/PS
→ If you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.
Normal/LB
→ If you have a normal TV. In this case , a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.
Wide
→ If you have a wide-screen TV.

- **Angle Mark**
Displays current angle setting information on the right hand corner of the TFT screen if available on the disc.

- **OSD Lang**
You can select your own preferred language seetings.

- **Closed Captions**
Closed captions are data that are hidden in the video signal of some discs.Captions are different from subtitles because captions hearing are impaired by showing the sound effects(e.g.,"phone ringing" and " footsteps"),while subtitles do not.
Before you select this function,please ensure that the disc contains closed captions information and your TV set also has this function.

- **Screen Saver**
This function is used to turn the screen saver On or Off.

- **Downmix**
This options allows you to set the stereo analog output of your DVD Player.

Audio Setup Page

- ***Audio Setup Page***

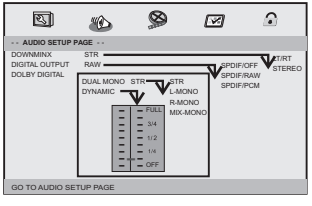

- **Downmix**
This options allows you to set the stereo analog output of your DVD Player.

→ **LT/RT** :Select this option if your DVD Player is connected to a Dolby Pro Logic decoder.
→ **Stereo** :Select this option when output delivers sound from only the two front speakers.

- **SPDIF Output**
The function is used to select the SPDIF Output:SPDIF Off,SPDIF/RAW,SPDIF/PCM.
→ **SPDIF Off**: Turns off the SPDIF output.
→ **SPDIF/RAW**: If you have connected your DIGITAL AUDIO OUT to a multi-channel decoder/receiver.
→ **SPDIF/PCM:** Only if your receiver is not capable of decoding multi-channel audio.

SETUP Menu Setting

- ***Dolby Digital***
  The options included in Dolby Digital Setup are: 'Dual Mono ' and 'Dynamic '.

- **Dual Mono**

  → **Stereo**:Left mono sound will send output signals to Left speaker and Right mono sound will send output signals to Right speaker.
  → **L-Mono**:Left mono sound will send output signals to Left speaker and Right speaker.
  → **R-Mono**:Right mono sound will send output signals to Left speaker and Right speaker.
  → **Mix-Mono**:Left and Right mixed mono sound will send output signals to Left and Right speakers.

- **Dynamic**

  → The levels for dynamic selection:Full,7/8,3/4,5/8,1/2,3/8,1/4,1/8 and Off.

Video Setup Page

- ***Video Setup Page***

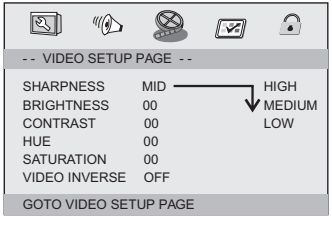

Sharpness,Brightness,Contrast,Hue,Saturation:setting the video quality.
Video inrerse: setting TFT screen display inverse on or off.

Preference Page

- ***Preference Page***

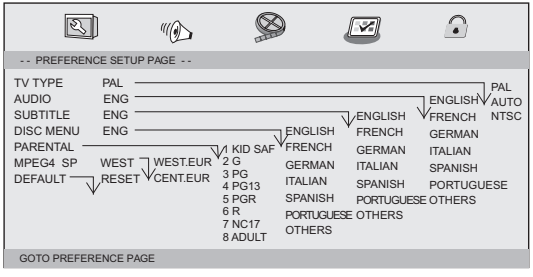

- **TV Type**
  Selecting the colour system that corresponds to your TV when AV outputs.This DVD Player is compatible with both NTSC and PAL.
  PAL - Select this if the connected TV is PAL system.It will change the video signal of a NTSC disc and output in PAL format.
  NTSC-Select this if the connected TV is NTSC system.It will change the video signal of a PAL disc and output in NTSC format.
  Auto:Chang the video signal output automatic according to the playing disk format.

- **Audio,Subtitle and Disc menu**
  These options set the Audio,Subtitle and Disc menu language fit for you.

- **Parental**
  Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc.This feature lets you set a playback limitation level.The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- MPEG4 SP
  Set MPEG4 subtitle.

- **Default**
  Setting the 'Default ' function will reset all options and your personal settings to the factory defaults and all your personal settings will be erased.

Password Setup Page

- **Password Setup Page**
  - Password mode: Set password mode on/off. If set to off, change parental level will not check password.
  - Setting new password:
- **Password**

This feature is used for Parental Control.Enter your four digit password when a hint is displayed on the screen.The default password is 1369.

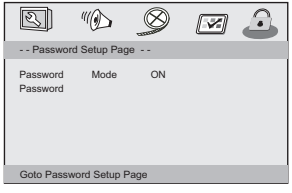

1.Press ▲▼ to highlight 'Password '
2.Enter its submenu by pressing►.
3.Press ENTER to open the 'New Password ' page.

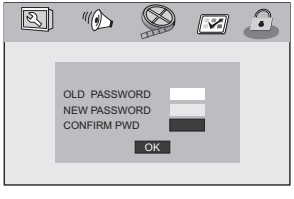

4. Enter the default password 4-digit code.
5. Enter the new 4-digit code.
6. Enter the new 4-digit code a second time to confirm.
→The new 4 digit code will be take effect.
7. Press OK to exit.

Helpful Hints:

- If the password has been changed ,the parental and disc lock code will also be changed.
- The default password (1369)is always active even the password has been changed.

Parameters and specifications

Electronical parameters

Item		Standard requirement
Power requirements		: AC 100-240 V , 50/60 Hz
Dimensions (Approx.)		: 210(L)X170(W)X42(H)MM
Power consumption		: <10W
Weight (Approx.)		: 0.75 kg
Operating humidity		: 5 % to 90 %
Output	VIDEO OUT	:1 Vp-p (75Ω)
	AUDIO OUT	:1.4 Vrms (1 KHz, 0 dB)
	Audio	:Speaker:1WX2,Headphones output, Coaxial output

System

Laser	:Semiconductor laser, wavelength 650 nm
Signal system	: NTSC / PAL
Frequency response	: 20Hz to 20 kHz(1dB)
Signal-to-noise ratio	:More than 80 dB (ANALOG OUT connectors only)
Dynamic range	:More than 85 dB (DVD/CD)

Note: Design and specifications are subject to change prior notice.

Battery Parameters

Battery Specifications:
Output: 7.4V

Charge / Discharge Time:
Standard charge time: 2h ~ 3h

Storage and work circumstances:

1. Storage circumstances	Temperature	Humidity
6 months	-20℃ ~ +45℃	65±20%
1 week	-20℃ ~ +65℃	65±20%

2.Work circumstances	Temperature	Humidity
Standard charge	0℃ ~ +45℃	65±20%
Standard discharge	-20℃ ~ +65℃	65±20%

DENVER®

ALL RIGHTS RESERVED
COPY RIGHT DENVER ELECTRONICS A/S

CE

www.denver-electronics.com

Instructions on environment protection

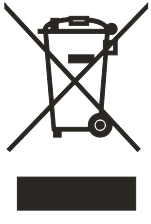

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen below. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the approriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.